


1. Contents

- Telephone set
- Headset
- Telephone Line cord
- Extension cord
- Operating manual
- Headset Hanger

2. Feature

- Please refer to the function of each parts as following page

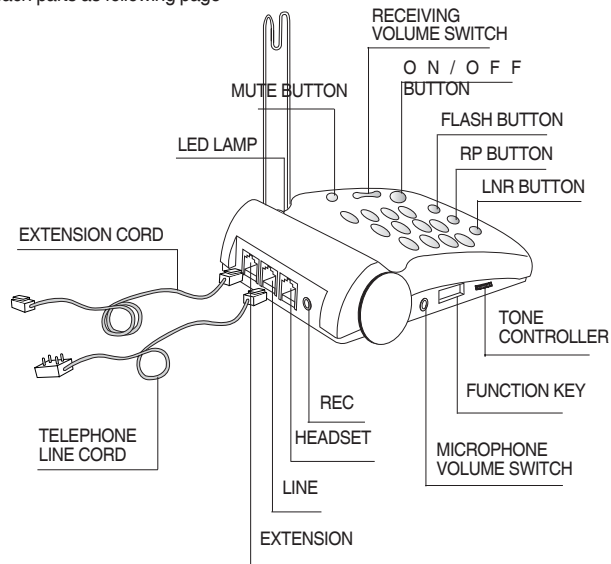


3. Function of each Part

PART		FUNCTION
LEDL AMP	IN USE	- LED lights in telephone call / LED blinks in MUTE
	RING	- LED lights in ringing
ON/OFF button		- Making a call or hang up the phone
DIAL		- Press it when making call
MUTE button		- Caller's signal mute - Selection of telephone ringing (Refer No. 8)
RECEIVING VOLUME SWITCH		- Receiving volume control
LNR button		- Last number redial key
RP button		- The last dialed number can be repeated automatically going on-hook by pressing RP key
FLASH button		- Receiving call can be transferred to the other phone when using key-telephone.
REC		- Recording can be done by external recorder connecting stereo cord of 3.5mm(option)
FUNCTION KEY		- Refer No. 5
HEADSET		- Headset connection Jack
LINE		- Telephone line connection Jack
EXTENSION		- Extension Jack to connect to the other phone
MICROPHONE VOLUME SWIT		- Microphone volume control
CH TONE CONTROLLER		- Tone Control

4. Installation of the Telephone


- Connect the telephone line cord to the line jack of the telephone set.
- Connect the other part of telephone line cord to the telephone terminal th wall.
- Connect the headset to headset jack of the telephone set.

Picture 1

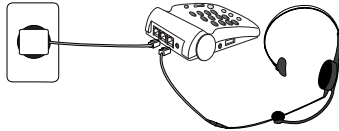


- If you want to use extra telephone connecting to the telephone, connect the extension cord to the extension jack of the telephone.

Picture 2

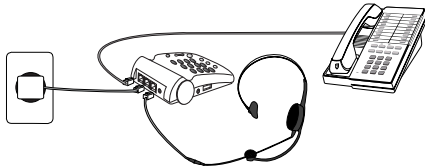


- Connect the telephone cord to the MODEM of computer

Picture 3

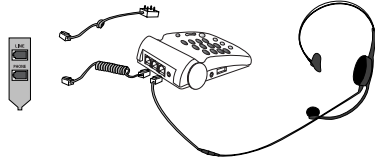

5. Setting and adjustment of function key

 Function key is positioned to the left side of the telephone
(Factory Set-up)




Function Key

1) Key No.1: Receiving Volume Control



- ON : Increase
- OFF : Decrease

2)Key No.2: TONE or PULSE

 - ON : PULSE
- OFF : TONE



 
3) Key No. 3 to "ON" : Simultaneous call selection

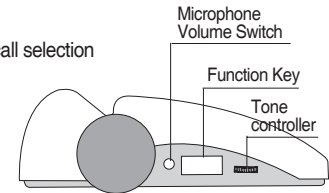

Please connect extra telephone to the extension jack of the telephone using extension cord.

If the key no. 3 is to ON, you can transfer the telephone call to other telephone or listen the telephone contents of other telephone.

 
4) Key no. 4 to "ON" : Bell Sound Control .



ON : Bell Sound Increase.
OFF : Bell Sound Decrease.


6. Controlling Microphone Volume

- 1) Microphone volume increase when +driver rotate to the right side.
- 2) Microphone volume decrease when +driver rotate to the left side.

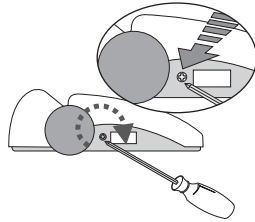


7. Tone controller

 - 1) High tone increase when rotating to the right side.
- 2) High tone decrease when rotating to the left side.



8. Installing Headset Hanger

Align the headset hanger with the projection part of telephone side, push and fix the headset hanger.

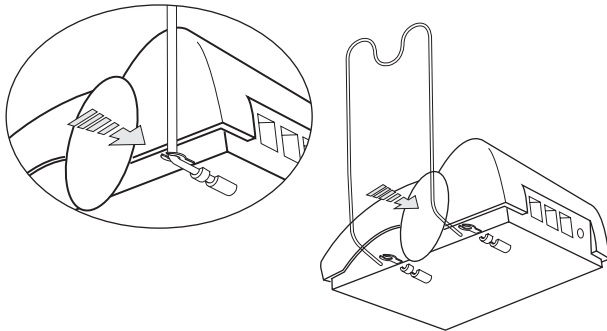

9. Programming Tone ringer

- Please set ON/OFF switch to be off hook.
- Pressing MUTE button and # button, Please change dial no. as follows;

Dial NO.	Repetition rate
3	One time (slow)
6	Four times (normal)
9	10 times (Fast)

10. Using the Telephone

- 1) Receiving
 - When ringing (RING LED), wear the headset, press ON/OFF switch and talk over the telephone with the caller.
- 2) Making a call
 - Wearing the headset, press ON/OFF switch and the dial no.that you want to call.

11. Storage & Handling

- 1) Storage
 - Avoid the places that have direct sunlight, ill ventilates, moistures, trembles, dusts or electrical noises
- 2) Notice
 - Do not modify or decomposes this product by yourself
 - Do not handle this product with wetted hand.
 - Clean the surface of this product with dry soft cloth.
 - Keep the headset away from dust and dirt, which can cause remature wear of parts.
 - Wipe the headset with dampened cloth occasionally, or cleaning solvents to clean the headset.

Warranty

We will repair or replace, at our opinion, this product if found defective due to materials or workmanship within the warranty period beginning from the original date of purchase. It is warranted by authorized representative for the period specified.

The original dated purchase receipt must be presented to the authorized service center when the service is rendered. On all carry-in models, transportation to and from the service station is the responsibility of the purchaser.

This warranty does not cover damages due to accident, fire, flood, earthquake and or other acts of god; misuse, incorrect line voltage, improper installation or unauthorized repairs, commercial use or damages occurred in shipping. Exterior and interior finish, lamp, glasses, plastic parts and temperature probes are not covered under this warranty. Customer adjustment according to the owner's manual are not covered under this warranty. This warranty is automatically void if the serial no is missing or altered.